


MATERIAL OVERVIEW OF URESTONE SYSTEM

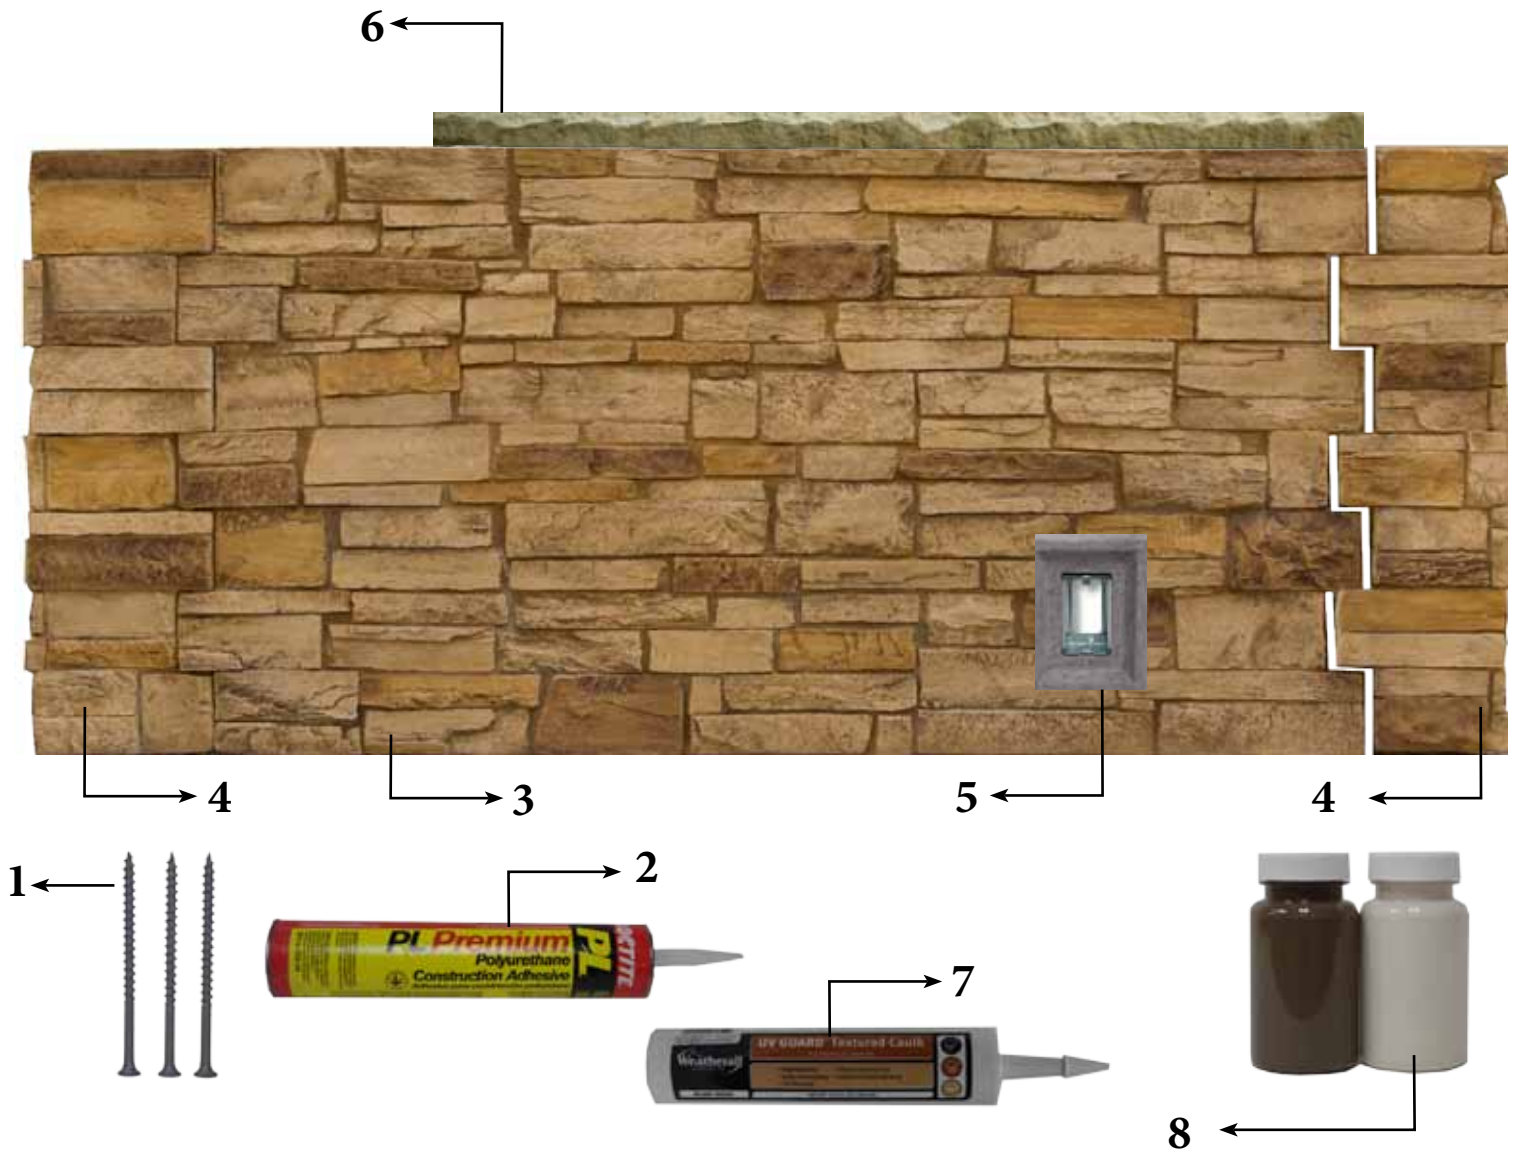

TYPICAL MATERIALS RECOMMENDED FOR THE INSTALLATION OF THE URESTONE SYSTEM

1. 2 1/2" Screws - apply 24 per panel
2. PI adhesive(optional on interior applications) - apply one 10 oz. Tube per panel
3. Urestone panel
4. Urestone corners
5. Receptacle cover trim
6. Ledge Trim
7. Colored textured caulk - need one tube per two seams
8. Touch up paint

*all accessory items can be purchased through us.